§ 125.409

§125.409 Reports of defects or unairworthy conditions.

- (a) Each certificate holder shall report the occurrence or detection of each failure, malfunction, or defect, in a form and manner prescribed by the Administrator.
- (b) The report must be made within 72 hours to the FAA Flight Standards district office in whose area the certificate holder has its principal operations base. The procedures to be used in complying with this section must be made a part of the manual procedures required by §125.73(f).

§125.411 Airworthiness release or maintenance record entry.

- (a) No certificate holder may operate an airplane after maintenance, preventive maintenance, or alteration is performed on the airplane unless the person performing that maintenance, preventive maintenance, or alteration prepares or causes to be prepared—
 - (1) An airworthiness release; or
- (2) An entry in the aircraft maintenance records in accordance with the certificate holder's manual.
- (b) The airworthiness release or maintenance record entry required by paragraph (a) of this section must—
- (1) Be prepared in accordance with the procedures set forth in the certificate holder's manual;
 - (2) Include a certification that—
- (i) The work was performed in accordance with the requirements of the certificate holder's manual;
- (ii) All items required to be inspected were inspected by an authorized person who determined that the work was satisfactorily completed;
- (iii) No known condition exists that would make the airplane unairworthy; and
- (iv) So far as the work performed is concerned, the airplane is in condition for safe operation; and
- (3) Be signed by a person authorized in part 43 of this chapter to perform maintenance, preventive maintenance, and alteration.
- (c) When an airworthiness release form is prepared, the certificate holder must give a copy to the pilot in command and keep a record of it for at least 60 days.

(d) Instead of restating each of the conditions of the certification required by paragraph (b) of this section, the certificate holder may state in its manual that the signature of a person authorized in part 43 of this chapter constitutes that certification.

APPENDIX A TO PART 125—ADDITIONAL EMERGENCY EQUIPMENT

(a) Means for emergency evacuation. Each passenger-carrying landplane emergency exit (other than over-the-wing) that is more that 6 feet from the ground with the airplane on the ground and the landing gear extended must have an approved means to assist the occupants in descending to the ground. The assisting means for a floor level emergency exit must meet the requirements of $\S25.809(f)(1)$ of this chapter in effect on April 30, 1972, except that, for any airplane for which the application for the type certificate was filed after that date, it must meet the requirements under which the airplane was type certificated. An assisting means that deploys automatically must be armed during taxiing, takeoffs, and landings. However, if the Administrator finds that the design of the exit makes compliance impractical, the Administrator may grant a deviation from the requirement of automatic deployment if the assisting means automatically erects upon deployment and, with respect to required emergency exits, if an emergency evacuation demonstration is conducted in accordance with §125.189. This paragraph does not apply to the rear window emergency exit of DC-3 airplanes operated with less than 36 occupants, including crewmembers, and less than five exits authorized for passenger use.

(b) Interior emergency exit marking. The following must be complied with for each pas-

senger-carrying airplane:

- (1) Each passenger emergency exit, its means of access, and means of opening must be conspicuously marked. The identity and location of each passenger emergency exit must be recognizable from a distance equal to the width of the cabin. The location of each passenger emergency exit must be indicated by a sign visible to occupants approaching along the main passenger aisle. There must be a locating sign—
- (i) Above the aisle near each over-the-wing passenger emergency exit, or at another ceiling location if it is more practical because of low headroom:
- (ii) Next to each floor level passenger emergency exit, except that one sign may serve two such exits if they both can be seen readily from that sign; and

(iii) On each bulkhead or divider that prevents fore and aft vision along the passenger cabin, to indicate emergency exits beyond